

Key Digital 4K AV over IP Encoder / Decoder System Addition Guide





Your Encoders (ENCs) and Decoders (DECs) are **pre-configured** to your specification (see attached).

Follow these instructions for a 1, 2, 3 AV over IP experience:



KDMS Pro


1. Connect all new ENCs and DECs to the network. Do not shut down the pre-existing ENCs and DECs
 - a. Wait 2 minutes for the equipment to bootup
2. Connect Window's PC into Network with ethernet cable
 - a. Set a unique static IP address to your PC. Match the first 3 octets of the ENCs and DECs
 - b. Download KDMS Pro (QR 1). Extract zip file. Open KDMS_Pro application.
 - i. **IMPORTANT:** Do not remove the application from the folder
 - c. Choose SCAN > NETWORK SCAN and KDMS Pro will find your system
 - d. The new equipment should appear at the bottom of the scan as OTHER 4K AVOIP DEVICES
3. In the AVOIP SYSTEM tab, click BUILD FROM SCAN
 - a. Name the new system, then click OK. Wait 5-20s as system file populates
 - b. Verify all devices are present in IP SYSETM window

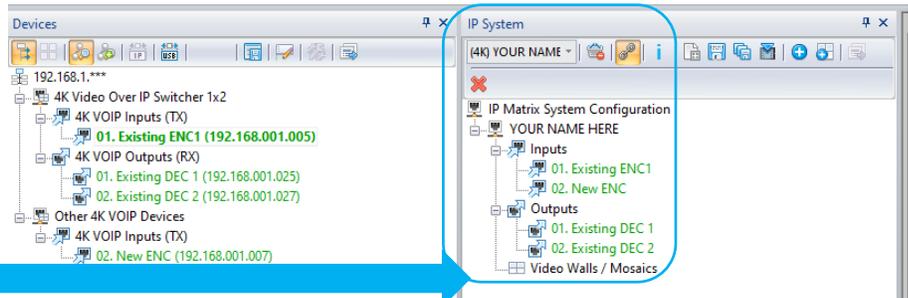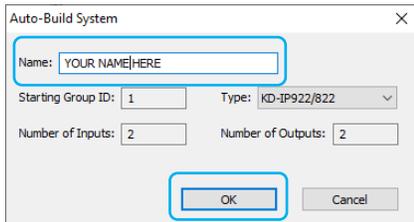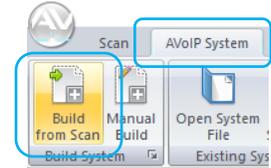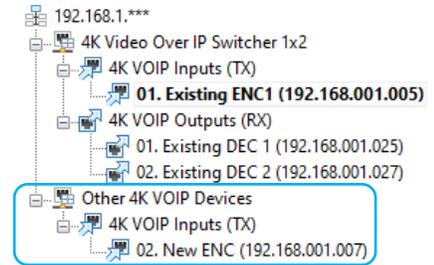

4. Click the SAVE AS button to save a copy of the switch file to the PC.




5. Click LOAD TO UNITS, then START LOAD

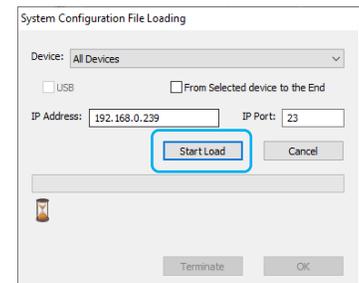

OPTIONAL SETTINGS:

- A. Source & Display Control may be set as desired (QR 2)

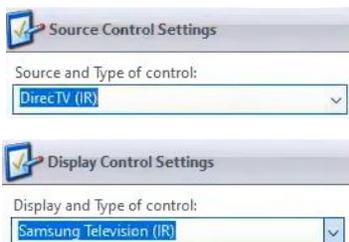

- B. Video Wall settings must be re-applied with each system load (QR 3)



Source & Display Control



Video Wall