


# KD-X222PO

4K HDMI over CAT5e/6 HDBaseT Extender Tx + Rx Kit.  
10.2Gbps Bandwidth. IR Emitter and Sensor Included.

## Operating Instructions

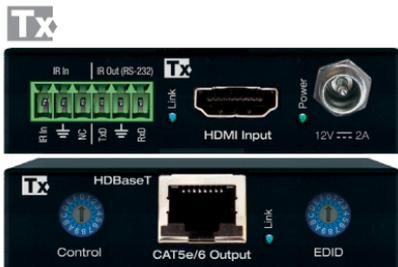

## Table of Contents

Key Features	1
Quick Setup Guide	2
Installation and Operation	2
Application Example	3
Connections	4
Extending IR or RS-232 Control	5
Settings	8
LED Indicator Lights	10
RS-232 Commands	10
Specifications	12

**Always follow the instructions provided in this Operating Manual.**

Please visit [www.keydigital.com](http://www.keydigital.com) for the latest product documentation and software downloads. Product features and specifications are subject to change without notice.

## Introduction

Key Digital® KD-X222P0 HDBaseT/HDMI (Tx + Rx) Extenders are an HDCP 2.2 compliant product that extend 4K/UHD 24/25/30 (4:4:4) and 4K/UHD 60 (4:2:0) signals up to 150 ft. using CAT6A cable, or up to 125 ft. using a CAT5e/6 cable. 1080p/60, 1920x1200, 3D signals are extended up to 250 ft. via CAT6A cable, or up to 230 ft. using a CAT5e/6 cable. In addition to HDMI video and audio signals, KD-X222P0 carries IR or RS-232 for controlling remotely located equipment or the RS-232 port can be used to control the KD-X222P0.

## Key Features

- › **HDBaseT via Single CAT5e/6 UTP/STP Extension:** With fully automatic adjustment of feedback, equalization, and amplification depending on cabling length
- › **Power over HDBaseT:** Tx unit powers Rx unit. Only one power connection needed.
- › **Signal Extension:**
  - › Up to **150 ft. @ 4K 24/25/30(4:4:4)/60(4:2:0)** using CAT6A cabling
  - › Up to **125 ft. @ 4K 24/25/30(4:4:4)/60(4:2:0)** using CAT5e/6 UTP/STP cabling
  - › Up to **250 ft. @ 1080p** / 1920x1200 using CAT6A cabling
  - › Up to **230 ft. @ 1080p** / 1920x1200 using third-party CAT5e/6 UTP/STP cabling
- › **HDCP 2.2:** Compliancy up to HDCP 2.2 and backward compliant
- › **HDR (High Dynamic Range):** HDR is achieved with AppleTV source at 4K/30 [4:2:2] 12bit deep color, enabling more life-like images through a greater range of luminance levels.
- › **4K/Ultra HD Resolution:** Supports signals up to 4096x2160 60Hz [4:2:0] 8bit, 4096x2160 30Hz [4:2:2] 12bit, and 4096x2160 30Hz [4:4:4] 8bit
- › **Deep Color Support:** Up to UHD/4K 30Hz 4:2:2/12 bits or 60Hz 4:2:0/8 bit
- › **Low Profile:** Super slim chassis design
- › **HDMI® and HDCP Licensing:** Fully licensed and compatible with HDCP 2.2 and HDMI latest technology such as 4K/UHD 4:2:0/8bit at 60f/s
- › **EDID Control:** Internal library features 15 default EDID configurations and native EDID data from Output/Display devices connected via Rx
- › **Hot Plug Detection Control:** Enables integrator to choose if active signal voltage is forced to connected input devices
- › **Full Buffer System™:** Manages TMDS re-clocking / signal re-generation, HDCP authentication with source & display, EDID Control handshake, and Hot Plug control
- › **IR Sensor:** Sensor powering via +5V on Rx unit's IR In port collects line-of-sight IR from remote(s) without external IR connecting block
- › **Up/Down IR:** Two channels of IR enable control to/from devices connected to Tx and Rx units
- › **RS-232:** Bi-Directional control to/from Tx and Rx unit on Phoenix connector
- › **Rotary Switch RS-232 Control Mode:** Provides control of Tx unit as well as connectivity status
- › **3D:** Support for standard 3D stereoscopic signal formats
- › **Surround Sound Audio:** Supports Dolby® TrueHD, Dolby® Digital Plus, Dolby Atmos®, and DTS-HD Master Audio™ multi-channel audio formats
- › **CEC Support:** For inter-device control between input and output HDMI channel
- › **I2C Communication:** EDID and HDCP authentication to Display and Source
- › **Control System Support:** Fully controllable by all RS-232 supported control systems via open API: Compass Control®, AMX®, Crestron®, KNX®, RTI®, Savant, URC®, Leviton® etc.

## Accessories

- > (1) 12V 2A DC Power Supply (Screw-In Type), model KD-PS12V2ASC, (2) Mounting Brackets, (1) IR Emitter, (1) IR Sensor
- > **KD-X222PO only requires power on the Tx unit, which extends power to the Rx unit**

## Quick Setup Guide


- Step 1:** Find a safe and convenient location to mount or place your KD-X222PO units
- Step 2:** Begin with the KD-X222PO Tx/Rx units and all input/output devices turned off with power cables removed
- Step 3:** Connect your HDMI source to the input port of your KD-X222PO Tx unit
- Step 4:** Connect your HDMI displays to the output port of your KD-X222PO Rx unit
- Step 5:** Connect KD-X222PO Rx unit to KD-X222PO Tx with CAT5e/6 cable using 568-B termination.
- Step 6:** Connect additional IR/RS-232 control connections and IR sensors
- Step 7:** Set the EDID rotary to position A for 4K resolution with 2ch audio. For 1080p with 2ch audio, use position 7. Refer to the SETTINGS section for more information
- Step 8:** **BEFORE** connecting power supply to power outlet, screw-in the power supply to the KD-X222PO Tx unit
- Step 9:** **AFTER** all connections are made, plug-in power supplies to power outlets
- Step 10:** Power on input/output devices

## Installation and Operation

Before permanently securing the unit for final installation, test for proper operation of the unit and cables in your system. It is recommended that you leave enough ventilation space to provide sufficient airflow and cooling.

**⚠ You MUST use the Power Supply PROVIDED with your unit or you VOID the Key Digital® Warranty and risk damage to your unit and associated equipment.**

## Application Example

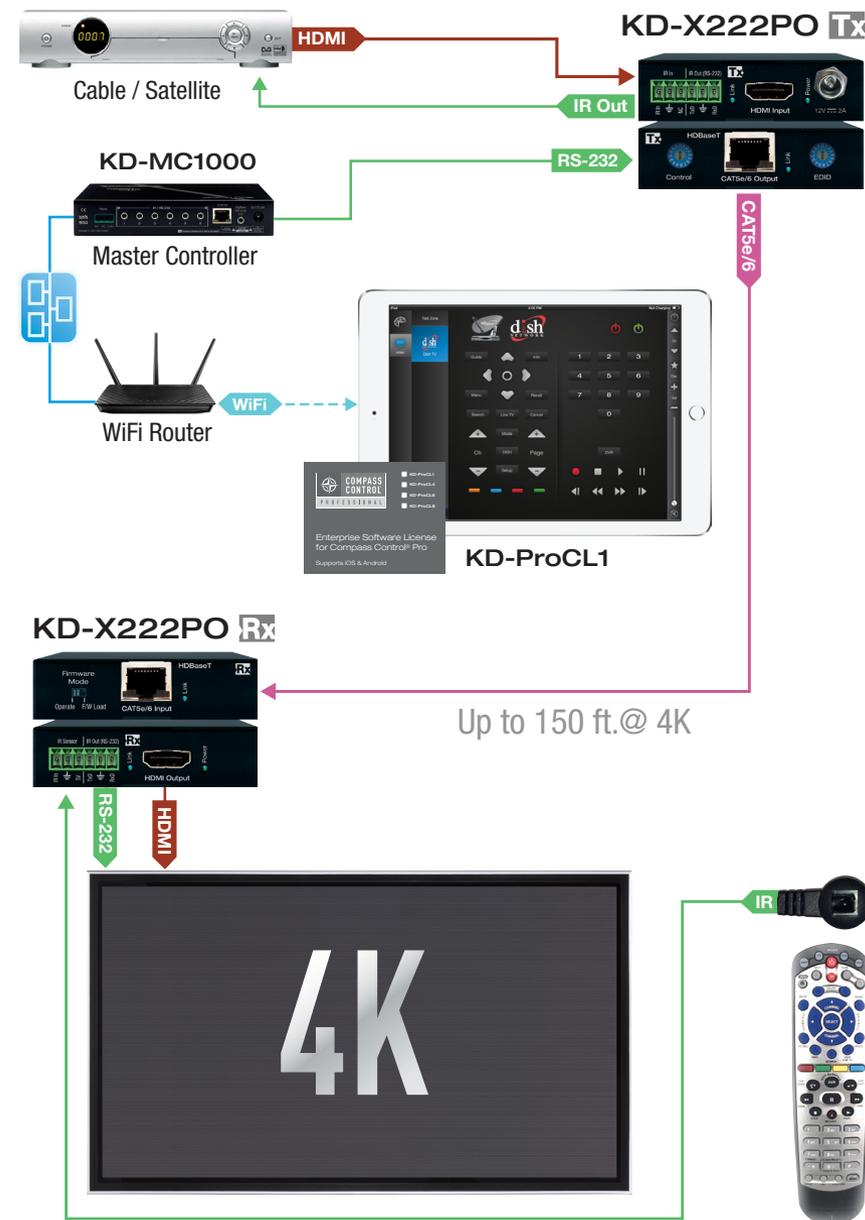

## Connections

Before making any connections, power off your source and display devices.

### Tx Unit:

- Using a short HDMI cable, connect your source device to the HDMI port labeled “HDMI Input”. For DVI-D/DVI-I sources, use appropriate adapters. For Display Port, use active converters.



- Connect the CAT5e/6 UTP or STP cable that connects to the Rx Unit at the port labeled “CAT5e/6 Output”. Use 568-B Termination.



- Make IR In and Out connections to receive (IR In port) or send (IR Out port) control signals. Refer to the “Extending IR & RS-232 Control” for more information.



- Connect a stripped wire to DB9 adapter cable for bi-directional RS-232 control. Refer to the “Extending IR or RS-232 Control” and the “RS-232 Commands” section for more information.



### Rx Unit:

- Using a short HDMI cable, connect your output / display device to the HDMI port labeled “HDMI Output”.



- Connect the CAT5e/6 cable at the port labeled “CAT5e/6 Input”. Use 568-B Termination.



- If you are sending or receiving IR, connect included IR Sensor and/or IR Emitter.



- If you are transmitting or receiving RS-232, connect to the IR out (RS-232) port.



- After all the connections are made, connect power using the included power supply and then power up your source and display equipment.

## Extending IR or RS-232 Control

### RS-232:

Bi-directional RS-232 is achieved utilizing the IR Out (RS-232) port on the Tx and Rx units. The connector is 3-pin phoenix and the pinout is the same on the Tx and Rx unit. **RS-232 can not be used at the same time as IR.**

- RS-232 Pass-through Mode
  - Send and receive (bi-directional) RS-232 commands for controlling remote equipment. Supports baud rate up to 115,200bps.
- Control Mode
  - Provides control of Tx units as well as connectivity status
  - See RS-232 Commands section for more information
- Firmware Upgrade Mode
  - Two different types of firmware may be updated: MCU (KD-X222PO units), and HDBaseT (extension over CAT5e/6)

### RS-232 Cabling

RS-232 cables are available through Key Digital and other wire suppliers, and can also be fabricated by skilled technicians.

## Key Digital RS-232 Cable Pinout Charts

Model	Wire	DB9 Pin	Signal
<b>KD-3.5FDB96</b> 3.5mm Stereo to Female DB9 (sold separately)	Red	2	TxD
	White	3	RxD
	Black	5	Ground
	Green	N/C	NA

	
KD-3.5FDB96 with 3.5mm TRS Connector	KD-3.5FDB96 after stripping wire

Model	Wire	DB9 Pin	Signal
<b>KD-3.5MDB96</b> 3.5mm Stereo to Male DB9 (sold separately)	Red	2	TxD
	Black	3	RxD
	Shield	5	Ground

	
KD-3.5MDB96 with 3.5mm TRS Connector	KD-3.5MDB96 after stripping wire

## IR

Bi-directional IR control extension is supported. **IR can not be used at the same time as RS-232.**

- » “IR In” port on the Tx unit extends to the “IR Out” port of the Rx unit
- » “IR In” port on the Rx unit extends to the “IR Out” port of the Tx unit

### IR In:

The IR In port is different for the Tx and Rx units. The Tx unit’s IR In port supports a Serial IR (hardwired) connection. The Rx unit’s IR In port supports an IR Sensor.

#### » Tx Unit / Serial IR:

- » A fixed 5V input signal on 2 phoenix pins
- » Signal and ground are required
- » Typically fed from a dedicated control system or an IR distribution block

#### » Rx Unit / IR Sensor:

- » IR Sensors can be connected directly into the Rx unit’s IR In port, without the need for an external IR distribution block
- » IR signal on the Tip, with 5V powering of the IR sensor on the power wire.

IR Sensor / IN Pinout	Wire	Signal
	Red	5V Power
	White	IR Signal
	Black	Ground

#### » IR Out:

- » Pass-through from signal of corresponding IR In port or bi-directional RS-232, as determined by the position of the Control Rotary
- » Driving power: 5V with 32mA minimum current
- » Typically connected with an IR emitter

IR Emitter / OUT Pinout	Wire	Signal
	Dashed/Marked	IR Signal
	Solid/Black	Ground

## IR Cabling

Your KD-X222P0 includes an IR Sensor and an IR Emitter.

**Signal acceptance:** The IR Sensor receives signals from a 90° angle at up to 30 ft. away. It accepts a maximum IR burst frequency of 55kHz.

**Only** the included IR sensors are compatible with the KD-X222P0. Third-party IR Sensors may not be compatible.



**The included IR Sensor.**

*Connects to the IR In port on the Rx unit.*



**The included blinking-type IR Emitter.**

*Connects to the IR Out port.*

## Settings

### EDID Control

EDID authentication is provided from the KD-X222/ KD-X222P0 Tx unit to the connected input / source device. The EDID file (AKA "handshake") is selected using the EDID Control rotary on the Tx unit and provides a list of compatible video and audio formats as well as digital data, informing the source device what it should output. Most sources will comply with a new EDID file without a power-cycle, but each source may behave differently.

### Default EDID Control Table, selected via EDID Control rotary

Position	EDID Description	EDID Control Rotary
0	Copy EDID from CAT5e/6 Output	 <p><b>IMPORTANT! Please apply light pressure to the Control rotary when making your selection</b></p>
1	1080i, 2CH AUDIO	
2	1080i, DOLBY/DTS 5.1	
3	1080i, HD AUDIO	
4	1080p, 2CH AUDIO	
5	1080p, DOLBY/DTS 5.1	
6	1080p, HD AUDIO	
7	4Kx2K@30, 2CH AUDIO	
8	4Kx2K@30, DOLBY/DTS 5.1	
9	4Kx2K@30, HD AUDIO	
A	4Kx2K@60, 2CH AUDIO	
B	4Kx2K@60, DOLBY/DTS 5.1	
C	4Kx2K@60, HD AUDIO	
D	1280x720p@60 DVI (no audio)	
E	1920x1080@30 DVI (no audio)	
F	3840x2160p@30 DVI (no audio)	

### Control Rotary



The Control rotary enables the integrator to choose the desired setting for IR Out (RS-232) ports, RS-232 Mode, and Hot Plug Detection control.

**The Control Rotary is located on the Tx unit.**

- **IMPORTANT! Please apply light pressure to the Control rotary when making your selection**

### Control Rotary Position Assignments:

Position	IR Out (RS-232) Mode	Hot Plug Detection Control
0	Serial IR	Bypass
1	Serial IR	Bypass
2	Serial IR	Forced HPD On
3	Serial IR	Forced HPD On
4	RS-232 Pass-Through	Bypass
5	RS-232 Pass-Through	Bypass
6	RS-232 Pass-Through	Forced HPD On
7	RS-232 Pass-Through	Forced HPD On
8	RS-232 Control	Bypass
9	RS-232 Control	Bypass
A	Firmware Upgrade for MCU	Forced HPD On
B	Firmware Upgrade for MCU	Forced HPD On
C	Firmware Upgrade for HDBaseT	Bypass
D	Firmware Upgrade for HDBaseT	Bypass
E	Firmware Upgrade for HDBaseT	Forced HPD On
F	Firmware Upgrade for HDBaseT	Forced HPD On

### Forced Hot Plug Detection (HPD)

Hot Plug Detection (HPD) may be forced on the Tx Rx unit in order to provide connected devices with necessary voltage to inform the device that a partner (display) is connected and active. If the Control rotary is set to any HPD Bypass setting, HPD signals from the output to the input device will pass as normal. In cases of many layers of connectivity, HPD may be lost leading to no signal at the display. In those cases, fix the Control rotary to any Forced HPD setting.

### Range and Resolution:

#### Distance performance is significantly increased when using CAT6A Cabling.

- » Up to 150 ft. @ 4K 24/25/30(4:4:4)/60(4:2:0) using CAT6A cabling
- » Up to 125 ft. @ 4K 24/25/30(4:4:4)/60(4:2:0) using CAT5e/6 UTP/STP cabling
- » Up to 250 ft. @ 1080p / 1920x1200 using CAT6A cabling
- » Up to 200 ft. @ 1080p / 1920x1200 using CAT5e/6 UTP/STP cabling



**NOTE: Use shielded metal RJ45 connectors with soldered ground wires when terminating shielded CAT5e/6.**

## LED Indicator Lights

### Power:

- » **Color: Green**
- » Solid illumination during power on state, as provided by healthy connection with power supply.
- » Steady blink if power is not adequate and/or if there is a connectivity problem with the KD-X222PO Rx unit

### HDMI Link (HDMI Input/Output):


- » **Color: Blue**
- » Tx Unit: Solid illumination from active signal (HDMI TMDS) reception from connected source device
- » Rx Unit: Solid illumination from active Hot Plug Detection voltage with connected display/output device
- » If Hot Plug Detection is forced to input device from Tx unit, the HDMI Active light will illuminate solid regardless of HDMI signal from connected device.


### CAT5e/6 Input/Output Link:

- » **Color: Blue**
- » Tx Unit: Solid illumination from active link and Hot Plug Detection voltage from Rx unit
- » Rx Unit: Solid illumination from active link with Tx unit

## RS-232 Commands

### Phoenix Terminal Connection Guide

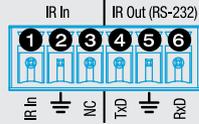Pin	Signal	Corresponding Wire (Accessory)
	 <p><b>Tx unit Phoenix connector</b></p>	 <p><b>IR Sensor</b></p>
1	IR In Signal	White (IR sensor)
2	IR In Ground	Black (IR sensor)
3	Tx: N/C Rx: IR In Sensor Power	Red (IR sensor)

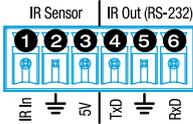Pin	Signal	Corresponding Wire (Accessory)
	 <p><b>Rx unit Phoenix connector</b></p>	 <p><b>IR Emitter</b></p>
4	IR Out Signal / RS-232 TxD	Dashed (IR emitter)
5	IR Out Ground / RS-232 Ground	Solid (IR emitter)
6	RS-232 RxD	N/A

### Connection protocol is as follows:

- » Baud Rate = 57600 bits per second
- » Data Bits = 8
- » Stop Bits = 1
- » Parity = None
- » Flow Control = None
- » Carriage Return: Required
- » Line Feed: Required

**Commands are not case-sensitive. Spaces shown below may be excluded. Carriage return and line feed is required at the end of each string.**

### Status Command:

```
KD-X222PO > STA
```

```
-----
--                               Key Digital Systems  STATUS                               --
-----
-- KD-X222PO           System Address : 00           F/W Version : 1.00           --
-- RS232 : Baud Rate=57600bps, Data=8bit, Parity=None, Stop=1bit           --
-- Running Day : 000, Time : 00:03           --
-- HD-BaseT Mode : Normal           , Link = ON           , Auto Reset = ON           --
--                               --
-- Video Input Status           --
-- EDID = 00, PWR5V = ON           , Link = ON           , HDCP = 2.x, Video = HDMI           --
--                               --
-- CAT5e/6 Video Output Status           --
-- DISP = SAM 2014, HPD = ON           , HDCP = ON           , DDC = GOOD, OUT = ON           , HDMI--
-----
```

## Help Command:

```
KD-X222PO > H
-----
--                               Key Digital Systems  HELP                               --
-----
-- KD-X222PO           System Address : 00           F/W Version : 1.00           --
-- Azz      : All Commands may have Prefix System Address zz=[01-99]           --
-- H        : Help                                           --
-- STA      : Global Status                                   --
-- SPCA xx   : Set System Address, xx = [00-99] (00=Single)           --
--
-- Video I/O Setup Commands:                                     --
-- SPO DBG ON/OFF : Set Output DGB ON/OFF                               --
-- SPO ON/OFF    : Set CAT5e/6 Output ON/OFF                           --
--
-- SPC ART ON/OFF : Set HD-BaseT Auto Reset ON/OFF                     --
-- SPC RSB z      : Set RS232 Baud Rate to z bps, z=[0-4]               --
--                               [0:57600, 1:38400, 2:19200, 3:9600, 4:4800]           --
-----
```

## Specifications

### Technical:

- » Inputs Tx (Each): 1 HDMI, 1 IR In
- » Outputs Tx (Each): 1 CAT5e/6 UTP/STP, 1 IR Out /RS-232 Bi-Directional
- » Inputs Rx (Each): 1 CAT5e/6 UTP/STP, 1 IR In
- » Outputs Rx (Each): 1 HDMI, 1 IR Out /RS-232 Bi-Directional
- » DDC Signal (Data): Input DDC Signal: 5 Volts p-p (TTL)
- » HDMI Video/Audio Signal: Input Video Signal: 1.2 Volts p-p
- » HDMI Connector: Type A, 19 Pin Female
- » RJ45 Connector: Shielded Link Connector, HDBaseT
- » IR In Connector: Phoenix Connectors
- » IR Out (RS-232) Connector: Phoenix Connectors

### General

- » Regulation: CE, RoHS, WEEE
- » Enclosure: Black Metal
- » Product (Each): 4.1" x 2.8" x 0.875", Weight: 0.75 lbs
- » Power (Tx Only): KD-PS12V2ASC, 12V/2A, 100-240VAC, 50-60Hz, Interchangeable head with screw-in connector
- » Accessories: (2) Mounting Brackets, (1) IR Emitter, (1) IR Sensor

## ⚠ Important Product Warnings:

1. Connect all cables before providing power to the unit.
2. Test for proper operation before securing unit behind walls or in hard to access spaces.
3. If installing the unit into wall or mounting bracket into sheet-rock, provide proper screw support with bolts or sheet-rock anchors.

## ⚠ Safety Instructions:

Please be sure to follow these instructions for safe operation of your unit.

1. Read and follow all instructions. Heed all warnings.
2. Do not use this device near water. Clean only with dry cloth.
3. Install in accordance with the manufacturer's instructions.
4. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
5. Only use attachments/accessories specified by the manufacturer.
6. Refer all servicing to qualified service personnel. Servicing is required when the device has been damaged in any way including:
  - » Damage to the power supply or power plug
  - » Exposure to rain or moisture

## ⚠ Power Supply Use:

You **MUST** use the Power Supply **PROVIDED** with your unit or you **VOID** the Key Digital® Warranty and risk damage to your unit and associated equipment.

## Contacting Key Digital®

### Technical Support

For technical questions about using Key Digital® products, please contact us at:

- » Phone: 914-667-9700 or E-mail: [tech@keydigital.com](mailto:tech@keydigital.com)

### Repairs and Warranty Service


Should your product require warranty service or repair, please obtain a Key Digital® Return Material Authorization (RMA) number by contacting us at:

- » Phone: 914-667-9700 or E-mail: [rma@keydigital.com](mailto:rma@keydigital.com)

## Warranty Information

All Key Digital® products are built to high manufacturing standards and should provide years of trouble-free operation. They are backed by a Key Digital Limited 3 Year Product Warranty Policy.

<http://www.keydigital.com/warranty.htm>

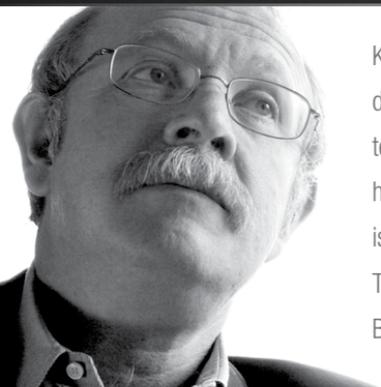

Key Digital®, led by digital video pioneer Mike Tsinberg, develops and manufactures high quality, cutting-edge technology solutions for virtually all applications where high-end video and control are important. Key Digital® is at the forefront of the video industry for Home Theater Retailers, Custom Installers, System Integrators, Broadcasters, Manufacturers, and Consumers.

Key Digital® :: 521 East 3rd Street :: Mount Vernon, NY 10553

Phone : 914.667.9700 Fax : 914.668.8666 Web : [www.keydigital.com](http://www.keydigital.com)